

Features

- ◇ Light comes with Auto-Off-Flash switch. When switched to AUTO or FLASH, the light comes on automatically at dusk.
- ◇ Solar panel on top of light charges the Nickel Metal Hydride battery during the day so the light will run all night.
- ◇ NiMH battery will operate the light for up to 8 hours straight or up to 12-14 hours on flash.
- ◇ Anchor with 30' tether line (cut tether line to appropriate length, depending on water depth) will hold The Lake Marker right where you want it.



Care Recommendations

1. Take your floating product out of the water during the winter months.
2. Replace the tether line once a year.
3. Clean your Lightscapes product with a mild soap based cleanser once a year. Inspect for wear or damage.



Lightscares LLC • 5889 N 700 W—1 • Craigville IN 46731 • Ph: 260-701-0345
Check Out Other Lightscares Products At www.lightscaresllc.com

Form 500-0010 2/21

The Lake Marker™


Patent Pending

Lights Up All Four Sides
At Night!

Choose Between
Continuous Or
Flashing Light

Solar Panel On Top Charges
The NiMH Battery

Built In The USA!

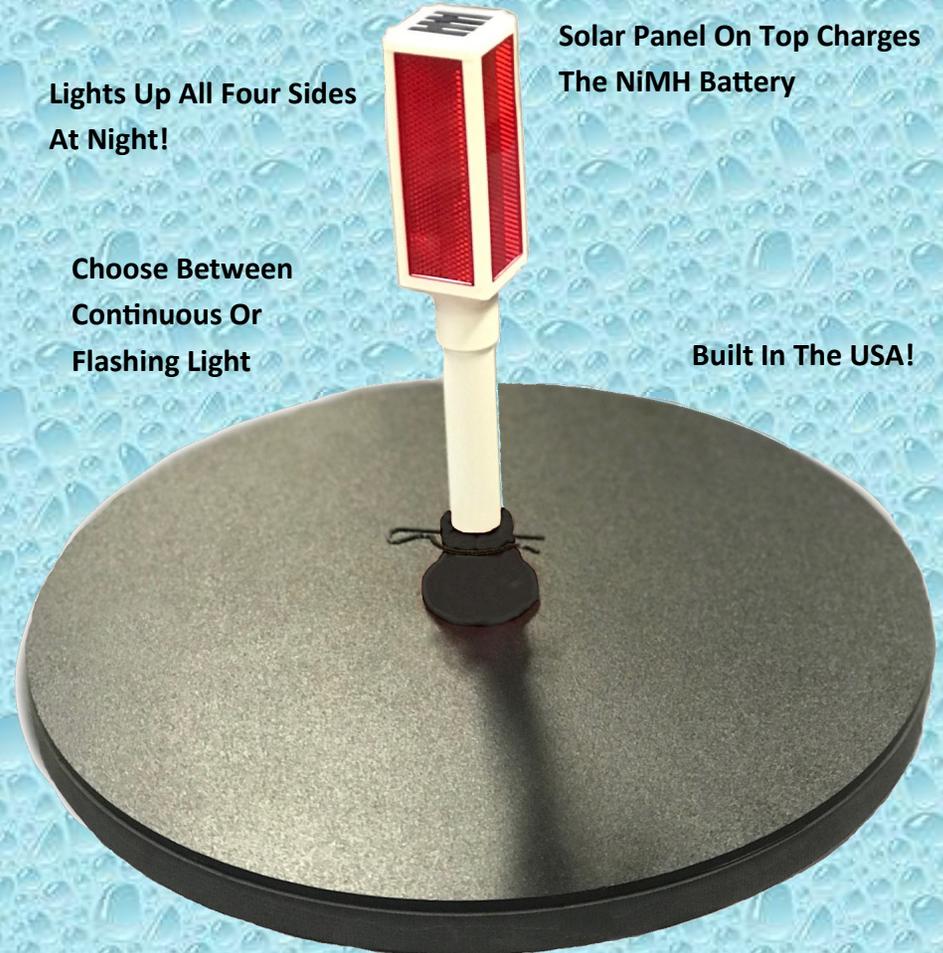

- Mark where submerged tree stumps are located.
- Mark shallow areas to prevent diving into shallow water.
- Mark your lake-front so it is easier to find at night
- Mark the designated swim area for the "little ones".

Please read instructions before installing.



Installation of your Lightscapes Lake Marker™

Model No. 103-0002

Step 1: Remove all contents in the box.

Step 2: Take the flag base and set it on a solid flat surface.

Step 3: Pull the short, white pole from the light fixture.

Step 4: IMPORTANT! Take the light, flip it over and there will be a small switch; turn it to AUTO or FLASH, depending on your preference.



Switch underneath the Lamp Assembly.

Step 5: Reinsert the light back onto the pole.

Step 6: Install Light pole into plastic holder at center of the floating base. Insert supplied R clip (found in plastic bag) into the holder hole and through the hole in the pole.

Step 7: Take the weighted anchor and tie one end of your nylon line around the handle, encircling the handle twice.

Step 8: Tie a secure knot three times to make sure your weight stays attached. If you do not tie a good knot, you could lose your weight in the water.

For Ponds: Before you tie the other end to the clip, be sure to know the maximum water level of lake location that you have chosen and give an extra foot of line to ensure you have room to tie the line to your clip. See Illustration A. below.

Step 9: Proceed to tie the opposite end of your line to your clip the same way as before. See Illustration B. below.

Step 10: Attach the clip to the mount on the underside of the floating base. In all cases, it is highly recommended to attach to the outer mounting location. The product can withstand 40+ mph winds before flipping over.

IMPORTANT - Using the center-mount clip method, the unit can only withstand winds up to 30mph.

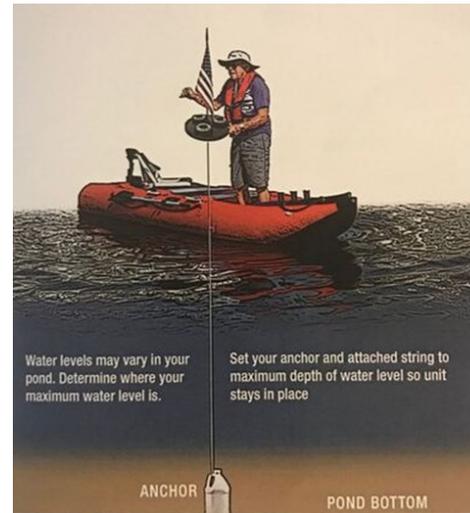


Illustration A.

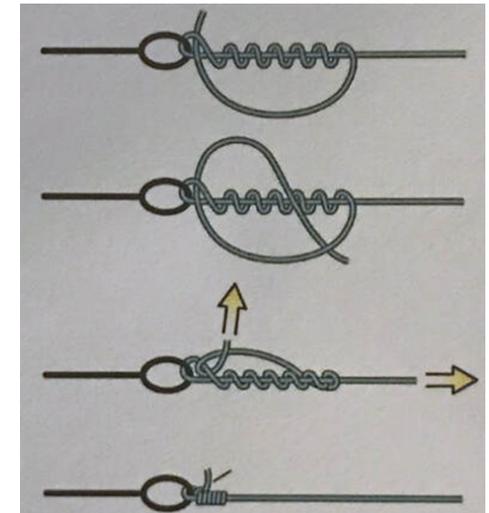


Illustration B.

If you have questions, feel free to contact us:

Lightscapes LLC • Phone: 260-701-0345 • Email: lightscapes2020@gmail.com