

Features

- ◇ The light comes with an On-Off-switch. Turn switch on and confirm it is on by covering the solar panel with your hand. If the light comes on, the switch is in the ON position. If it doesn't turn on after cycling the switch, make sure the battery is charged by placing it in sunlight.
- ◇ Solar panel on top of light charges the Nickel Metal Hydride battery during the day so the light will run well into the night.
- ◇ NiMH battery will operate the light for up to 8 hours straight.
- ◇ Anchor with 30' tether line (cut tether line to appropriate length, depending on water depth) will hold The Relaxations Station right where you want it.



Care Recommendations

1. Take your floating product out of the water during the winter months.
2. Replace the tether line once a year.
3. Clean your Lightscares product with a mild soap based cleanser once a year. Inspect for wear or damage.



Lightscares LLC • 5889 N 700 W—1 • Craigville IN 46731 • Ph: 260-701-0345
Check Out Other Lightscares Products At www.lightscaresllc.com

Form 500-0017 3/21

Lightscares LLC

Relaxation Station Mini™

Patent Pending



Built In The USA!

- Perfect for Ponds, Pools, Hot Tubs, And Patio!
- Solar Panels Charge NiMH Batteries During The Day.
- Lights Come On Automatically At Dusk.
- Comes With Anchor And Tether Line.

Please read instructions before installing.



Installation of your Lightscares Relaxation Station Mini™

Model No. 103-0004

Step 1: Remove all contents in the box.

Step 2: Take the base and set it on a solid flat surface.

Step 3: IMPORTANT! There is a switch beneath the light fixture. Turn it on before installing in a pond or prior to the first time you use The Relaxation Station. To test the switch, put your hand over the solar panel at the top. If the light comes on you know the switch is in the ON position. If it doesn't turn on after cycling the switch, make sure the battery is charged by placing it in sunlight.



**Switch at the Base of the
Lamp Assembly.**

Step 4: Insert tiki torch pole into plastic holder on the floating base. Insert supplied R clip (found in plastic bag) into the holder hole and through the hole in the light pole.

Step 5: Take the weighted anchor and tie one end of your nylon line around the handle, encircling the handle twice.

Step 6: Tie a secure knot three times to make sure your weight stays attached. If you do not tie a good knot, you could lose your anchor in the water.

For Ponds: Before you tie the other end to the clip, be sure to know the maximum water level of pond location that you have chosen and give an extra foot of line to ensure you have room to tie the line to your clip. See Illustration A. below.

Step 7: Proceed to tie the opposite end of your line to your clip the same way as before. See Illustration B. below.

Step 8: Attach the clip to the mount on the underside of the floating base. In all cases, it is highly recommended to attach to the outer mounting location. The product can withstand 40+ mph winds before flipping over.

IMPORTANT - Using the center-mount clip method, the unit can only withstand winds up to 30mph.

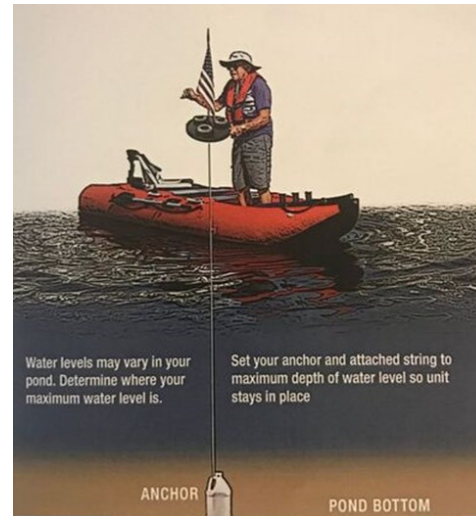


Illustration A.

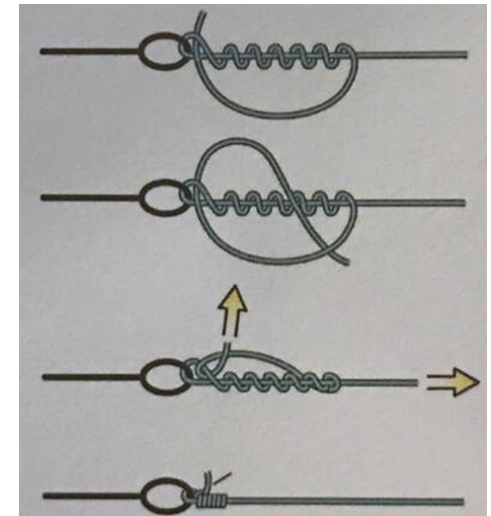


Illustration B.

If you have questions, feel free to contact us:

Lightscapes LLC • Phone: 260-701-0345 • Email: sales@lightscapesllc.com